SCROLLSAW PATTERNS:

Following are the full-size scrollsaw patterns for creating beautiful projects from our CD Scrollsaw Pattern Book.

Each pattern is shaded to make it easier to see where to cut and where not to cut.

To navigate from page to page, simply use the vertical scrollbar on the right hand side of the screen, or the "Go To" buttons $\left| \begin{array}{c} \bullet \end{array} \right| \left| \begin{array}{c} \bullet \end{array} \right|$ located at the top and bottom of the screen.

To print, simply click on the "Printer Icon" at the top of the screen, or choose "Print" from the "File" pull-down menu. Be sure to specify which page numbers you want to print, and the number of copies. You can determine the page number from the "Page #" box 4 of 107 at the bottom of the screen.

When finished, click the "First Page" button to go back to the beginning to choose another section to view.

Simply click on the button of your choice.

INTROPHOTOSHOW-TOPATTERNSMORE CD'S AVAILABLEBACK TO START

















































































































































































































