

SCROLLSAW WORKSHOP

WWW.SCROLLSAWWORKSHOP.BLOGSPOT.COM

Digital Patterns

Designed by Steve Good



Hundreds of free Patterns
Stencil Printer
Jigsaw Puzzle Templates
DVD's
Key Chain Pattern Printer
Video Tutorials
Reviews
Community Forum and more.



Note to commercial print employees: I give my permission to print as many of this pattern book as your customer requires.

steve@stevgood.com

Copyright Steve Good 2014


New Vase



After I cut this vase I decided I would have liked it better with the fret work on the front only. I made the pattern so you can choose to make it either way.



When you glue up the sides notice the angle on the bottom of the side piece. Let it over hang. We will flatten the bottom after the glue dries. This is easier than trying to cut the angle.

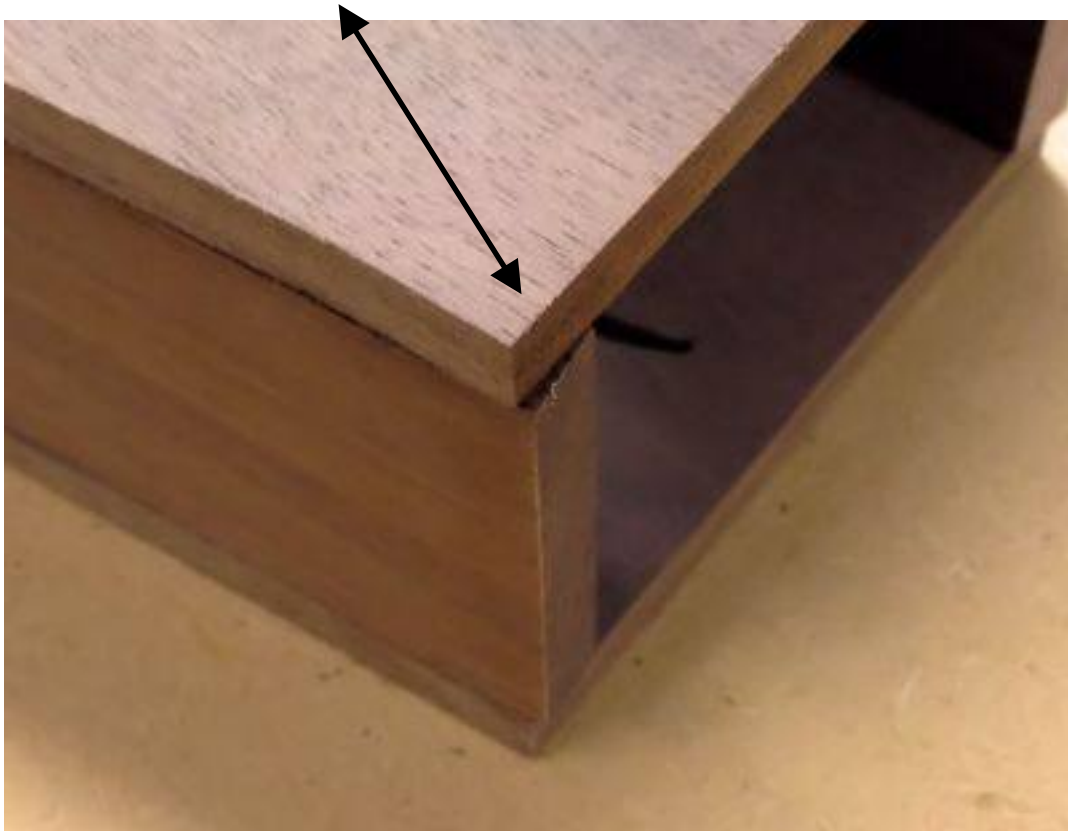



Glue and clamp the pieces. We will attach the base after the glue dries.






I'm using my disk sander to flatten the bottom. If you do not have a disk sander then glue a large sheet of sand paper to a flat surface. Move the vase back and forth on the sand paper until the bottom is flat. Occasionally sit the vase on a known flat surface to test for flatness. Finish sanding all the sides and glue on the base. Finish as desired.



1/4" Thick



1/4" Thick

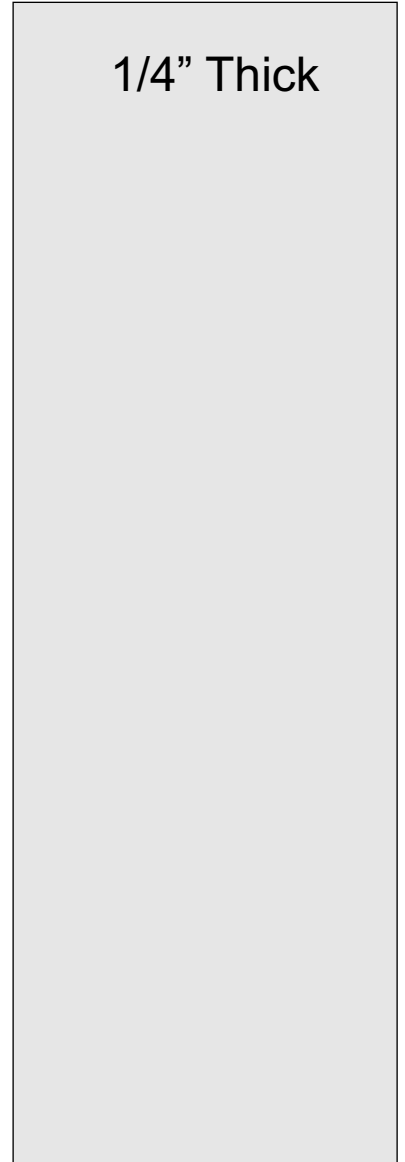



1/4" Thick



1/4" Thick

Base

