


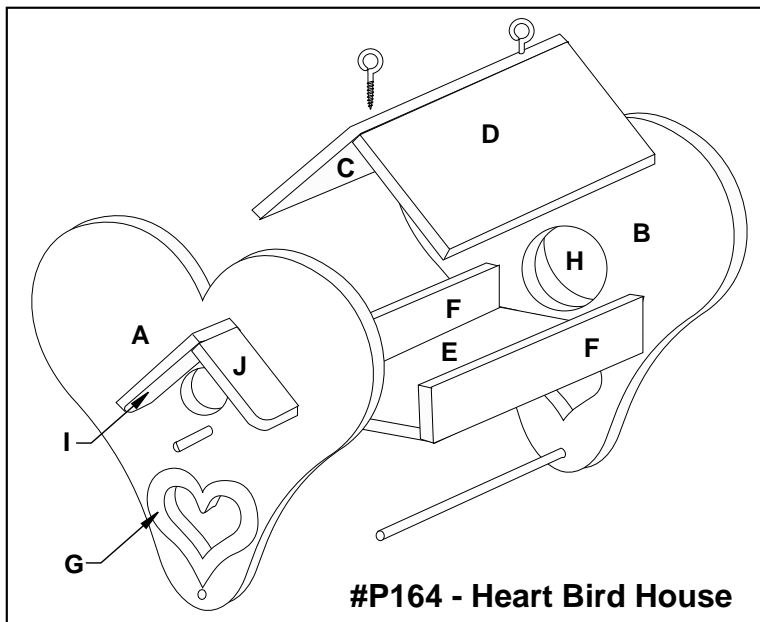

#P164 - Heart Birdhouses

2 full-size designs, simple step-by-step instructions, and assembly diagrams will have you creating beautiful birdhouses for every tree in your yard!



GREAT AMERICAN SCROLLSAW




DOWNLOADABLE PATTERNS™

The Berry Basket © Copyright 2002 • All Rights Reserved
www.greatamericanscrollsaw.com • a division of The Berry Basket

#P164 - Assembly Instructions

1. Select your material from a variety of hardwoods or solid core plywood.
2. Measure each pattern piece and cut the work pieces to size accordingly. Sand as necessary.
3. Make all pattern pieces by adhering the paper patterns to the work pieces with a repositionable spray adhesive. Cut the outer shapes and any interior designs. And drill where indicated.
4. Remove all paper patterns. Sand where needed. The edges can be rounded by sanding or using a small roundover router bit if desired.
5. Assemble by first attaching the Sides to the Floor. Next attach the 2 Roof halves together, overlapping the wider side over the narrower one. Using glue and finishing nails attach the Front to the Roof and Floor. Turn the project over, insert the bottom perch dowel. Then attach the Back in the same manner as the Front along with Flap. Next, attach the 2 Entry Hole Roof halves together, overlapping the wider side over the narrower one. Insert the tabs into the slots on the Front and secure with glue. Finally, attach the front perch and overlays with silicon or waterproof glue. Paint or finish as desired.

HEART BIRD HOUSE			
#P164			
Description	Item	Qty	Size
Front	A	1	3/8" T x 10" W x 10" L
Back	B	1	3/8" T x 10" W x 10" L
Roof	C	1	3/8" T x 4" W x 6" L
Roof	D	1	3/8" T x 3 5/8" W x 6" L
Floor	E	1	3/8" T x 3 3/4" W x 6" L
Sides	F	2	3/8" T x 1 3/8" W x 6" L
Overlay	G	2	5/32" - 1/4" T x 3 1/4" W x 3 1/4" L
Flap	H	1	5/32" - 1/4" T x 3" W x 3 3/4" L
Front Roof	I	1	3/8" T x 2" W x 3" L
Front Roof	J	1	3/8" T x 2" W x 3" L

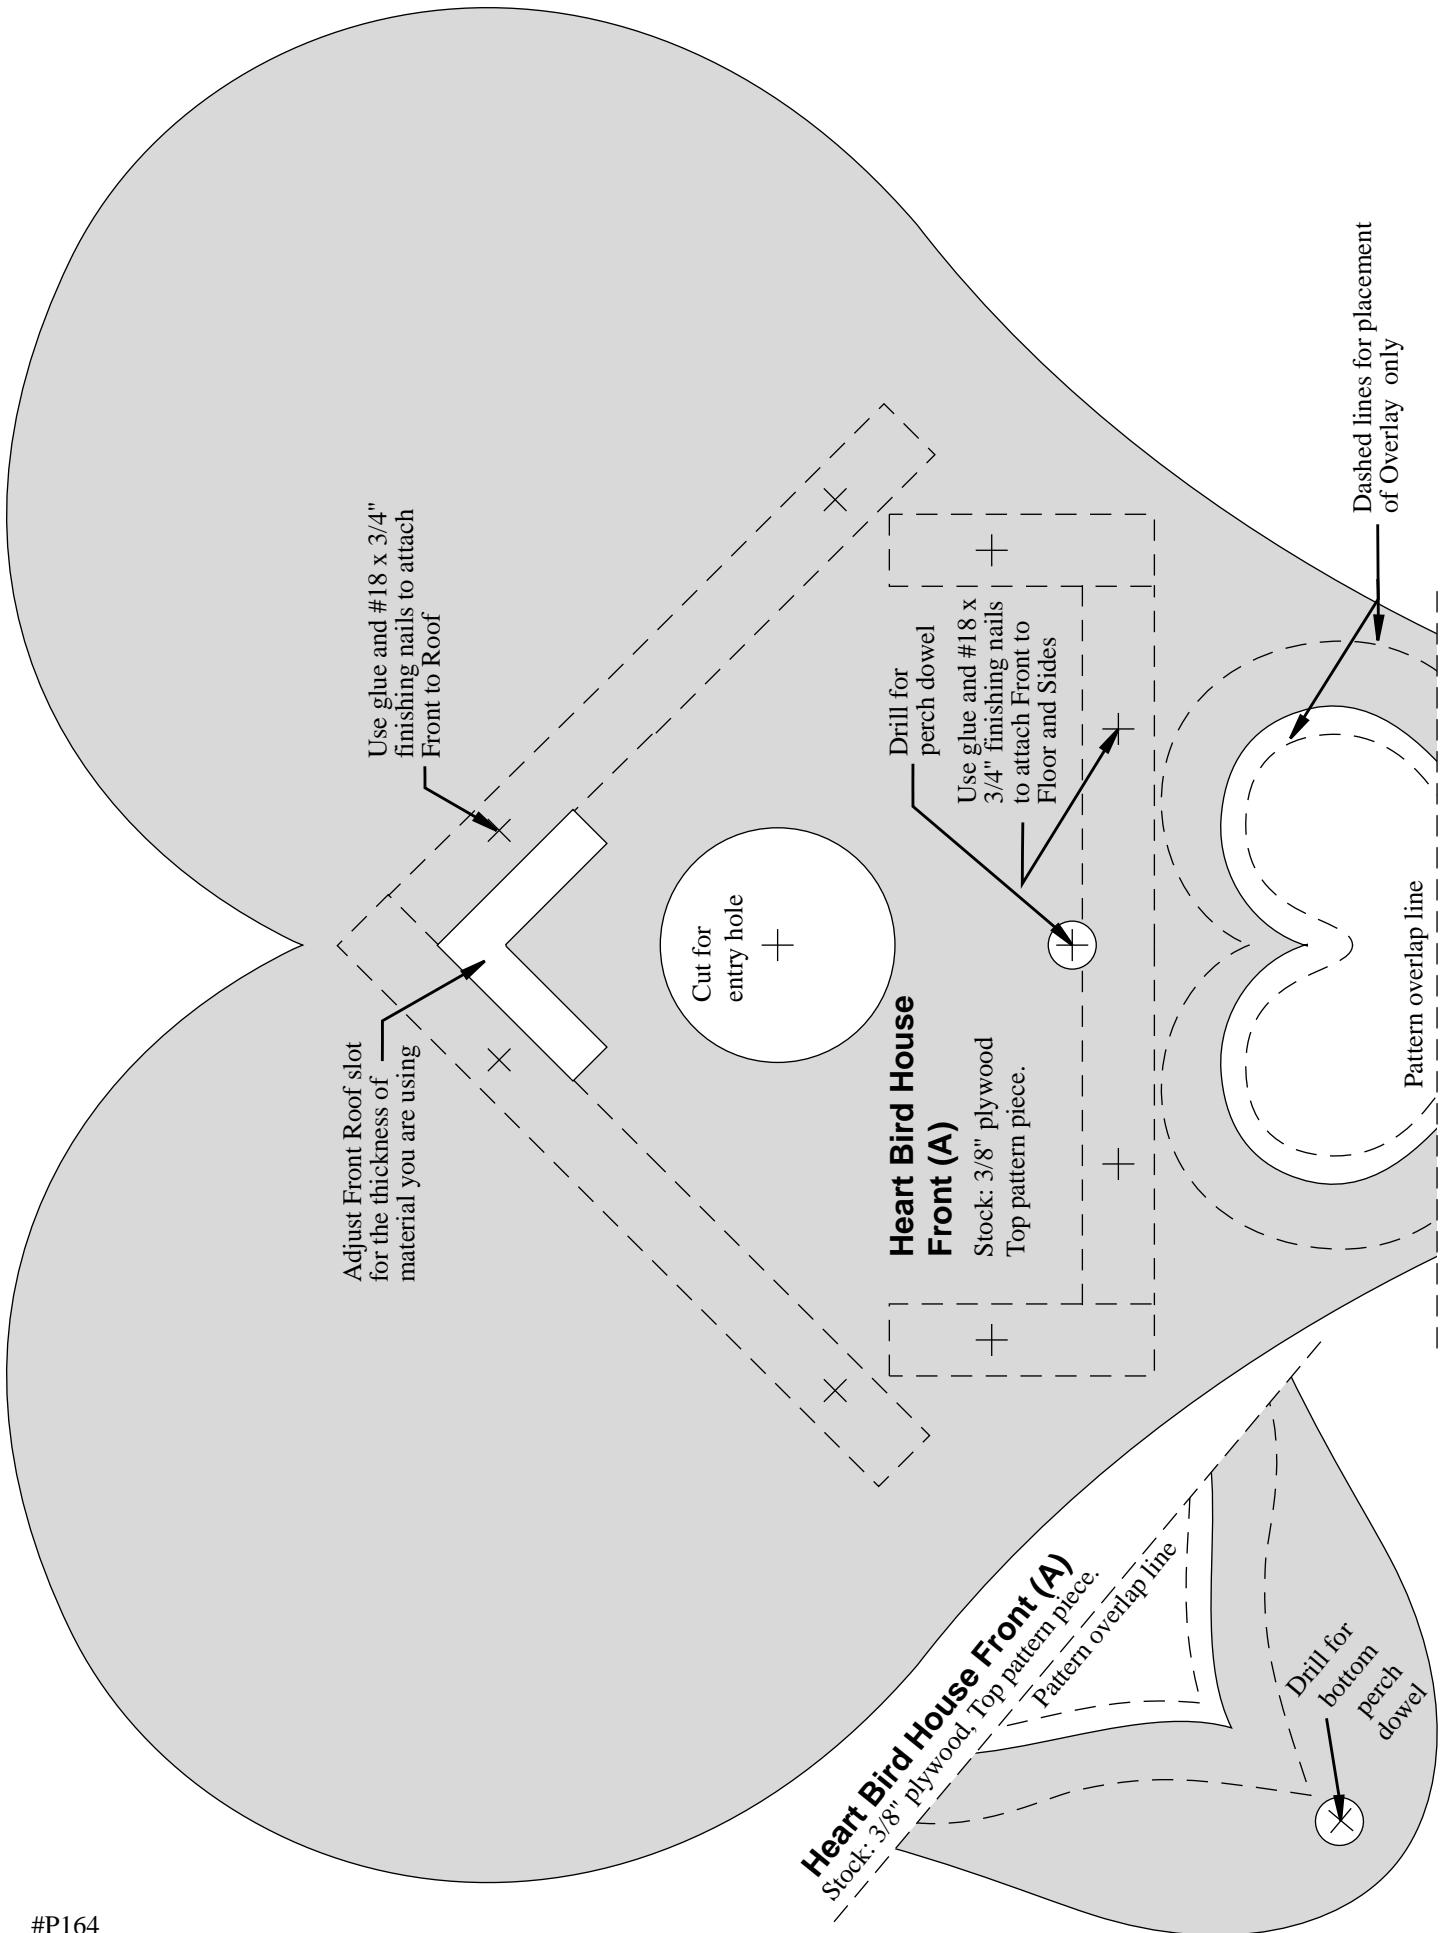

Adjust Front Roof slot for the thickness of material you are using

Use glue and #18 x 3/4" finishing nails to attach Front to Roof

Cut for entry hole

Heart Bird House Front (A)
 Stock: 3/8" plywood
 Top pattern piece.

Drill for perch dowel

Use glue and #18 x 3/4" finishing nails to attach Front to Floor and Sides


Dashed lines for placement of Overlay only

Pattern overlap line

Heart Bird House Front (A)
 Stock: 3/8" plywood, Top pattern piece.

Pattern overlap line

Drill for bottom perch dowel

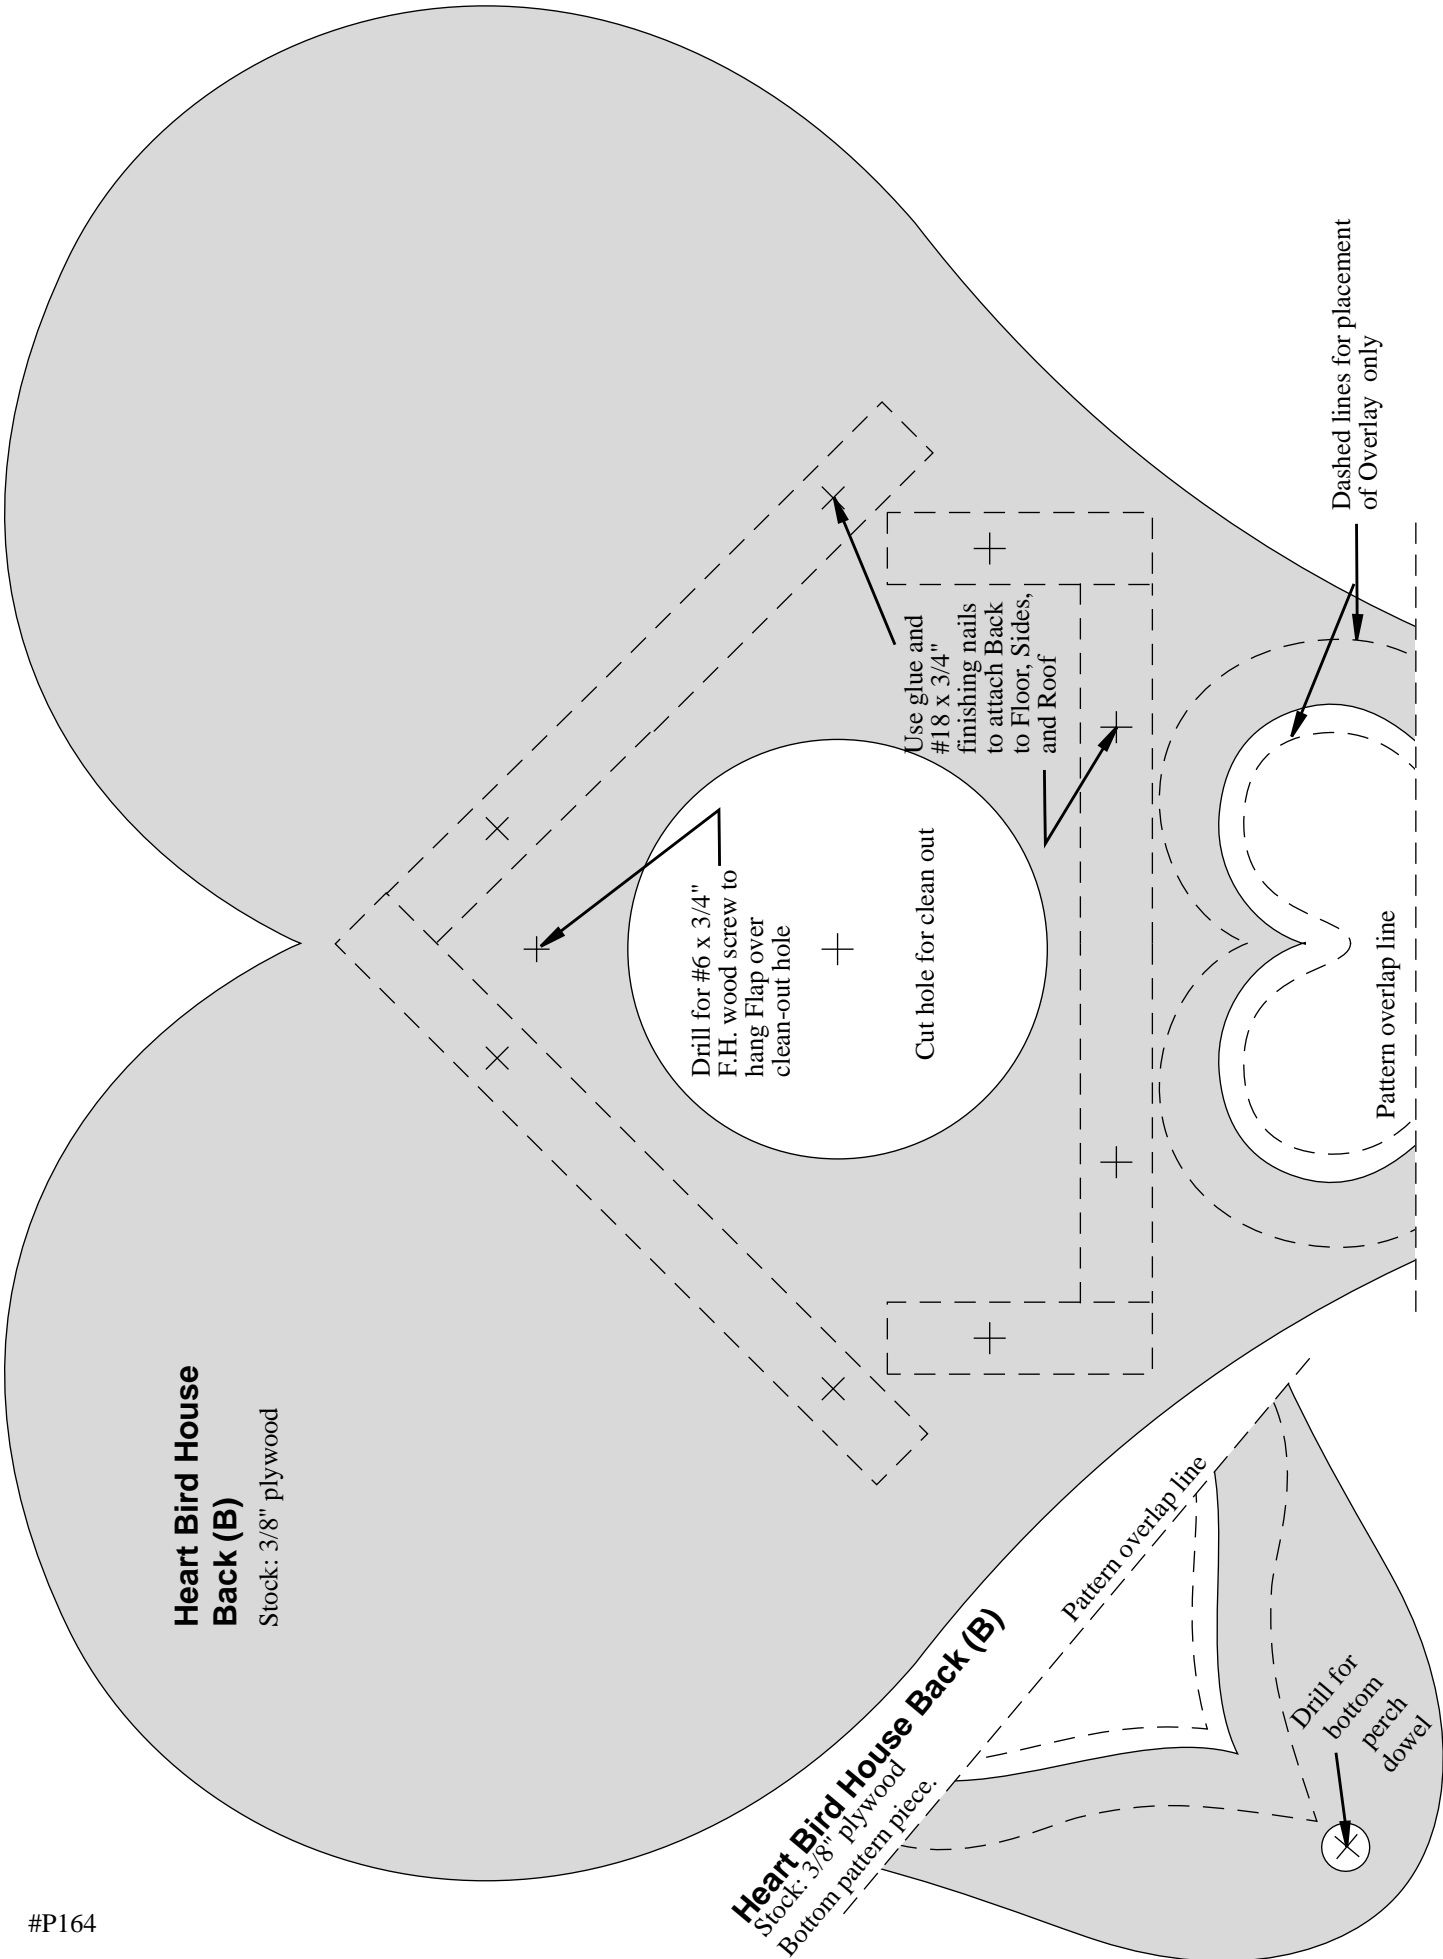

Heart Bird House Back (B)
 Stock: 3/8" plywood

Drill for #6 x 3/4" F.H. wood screw to hang Flap-out over clean-out hole

Use glue and #18 x 3/4" finishing nails to attach Back to Floor, Sides, and Roof

Dashed lines for placement of Overlay only

Pattern overlap line

Heart Bird House Back (B)
 Stock: 3/8" plywood
 Bottom pattern piece.

Drill for bottom perch dowel

Heart Bird House Side (F)

Stock: 3/8" plywood

Heart Bird House Floor (E)





Stock: 3/8" plywood



Heart Bird House Roof (C) / Roof (D)

Stock: 3/8" plywood

For Roof (C) cut on these lines

For Roof (D) cut on these lines

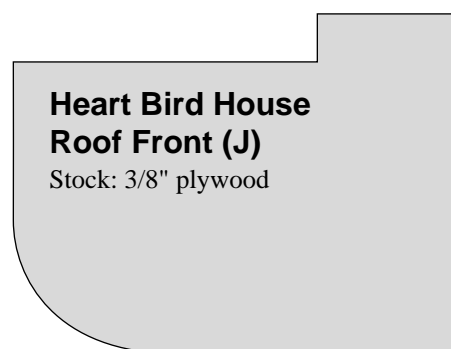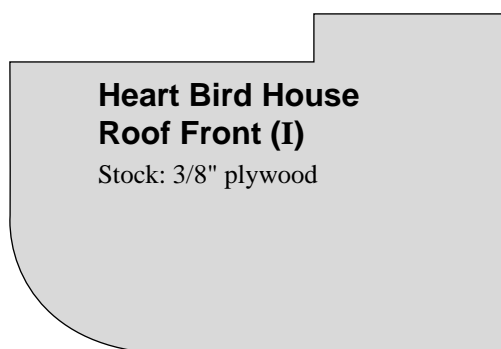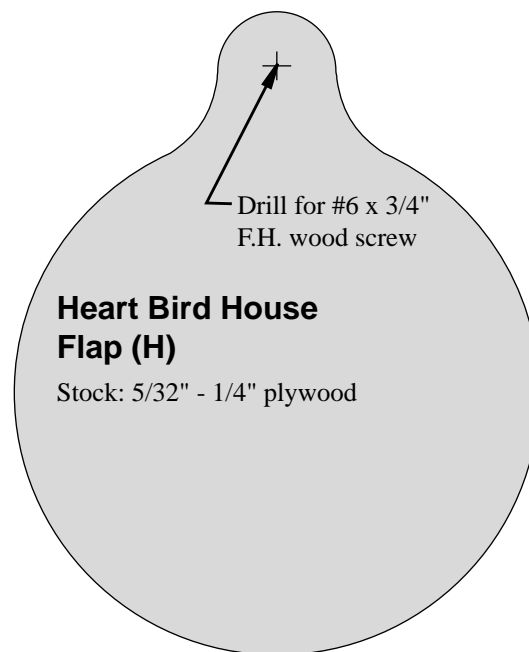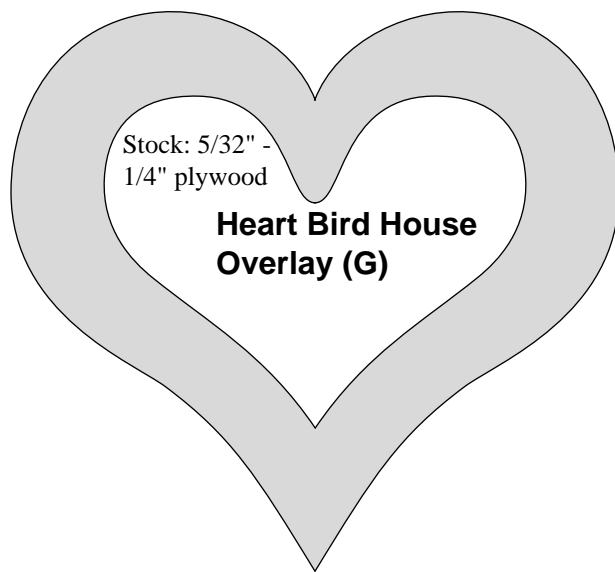

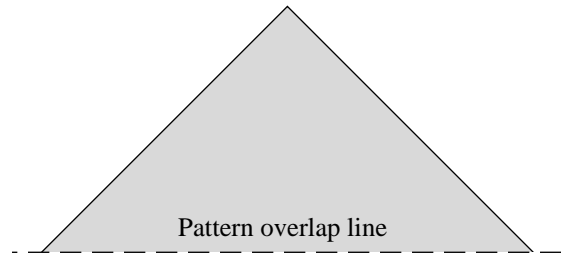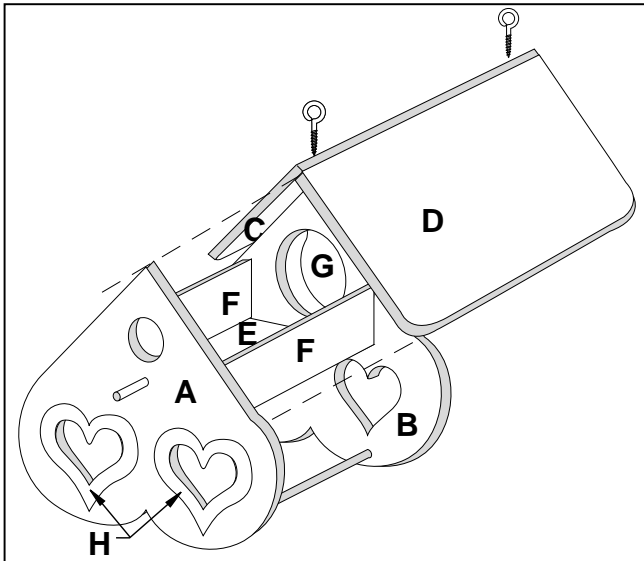

Double Heart Bird House Front (A)

Stock: 3/8" plywood
Top pattern piece.


#P164 - Double Heart Bird House Instructions

1. Select your material from a variety of hardwoods or solid core plywood.
2. Measure each pattern piece and cut the work pieces to size accordingly. Sand as necessary.
3. Make all pattern pieces by adhering the paper patterns to the work pieces with a repositionable spray adhesive. Cut the outer shapes and any interior designs. And drill where indicated.
4. Remove all paper patterns. Sand where needed. The edges can be rounded by sanding or using a small roundover router bit if desired.
5. Assemble by first attaching the Sides to the Floor. Next attach the Front to the Floor. Turn the project over, insert the bottom perch dowels, and attach the Back to the Floor. Next attach the Flap. Now attach the 2 Roof halves together, overlapping the wider side over the narrower one. Center the Roof over the Front and Back and attach with glue and finishing nails. Insert the perch and attach the overlays with silicon or waterproof glue. Paint or finish as desired.

DOUBLE HEART BIRD HOUSE


#P164

Description	Item	Qty	Size
Front	A	1	3/8" T x 8" W x 9" L
Back	B	1	3/8" T x 8" W x 9" L
Roof	C	1	3/8" T x 7" W x 10" L
Roof	D	1	3/8" T x 6 5/8" W x 10" L
Floor	E	1	3/8" T x 3 3/4" W x 6" L
Sides	F	2	3/8" T x 1 3/8" W x 6" L
Flap	G	1	5/32" - 1/4" T x 3" W x 3 1/2" L
Overlay	H	4	5/32" - 1/4" T x 3 1/4" W x 3 1/2" L

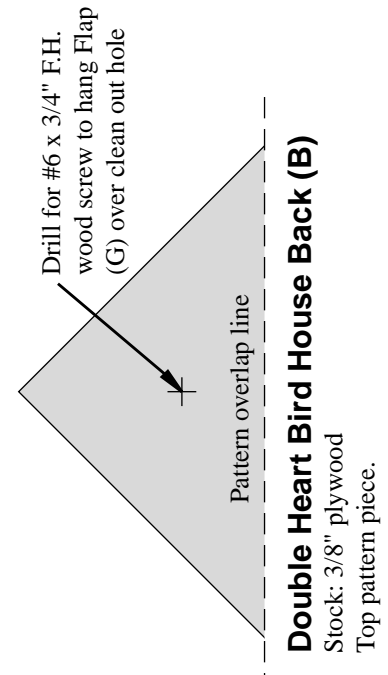

Double Heart Bird House Back (B)

Stock: 3/8" plywood
Top pattern piece.

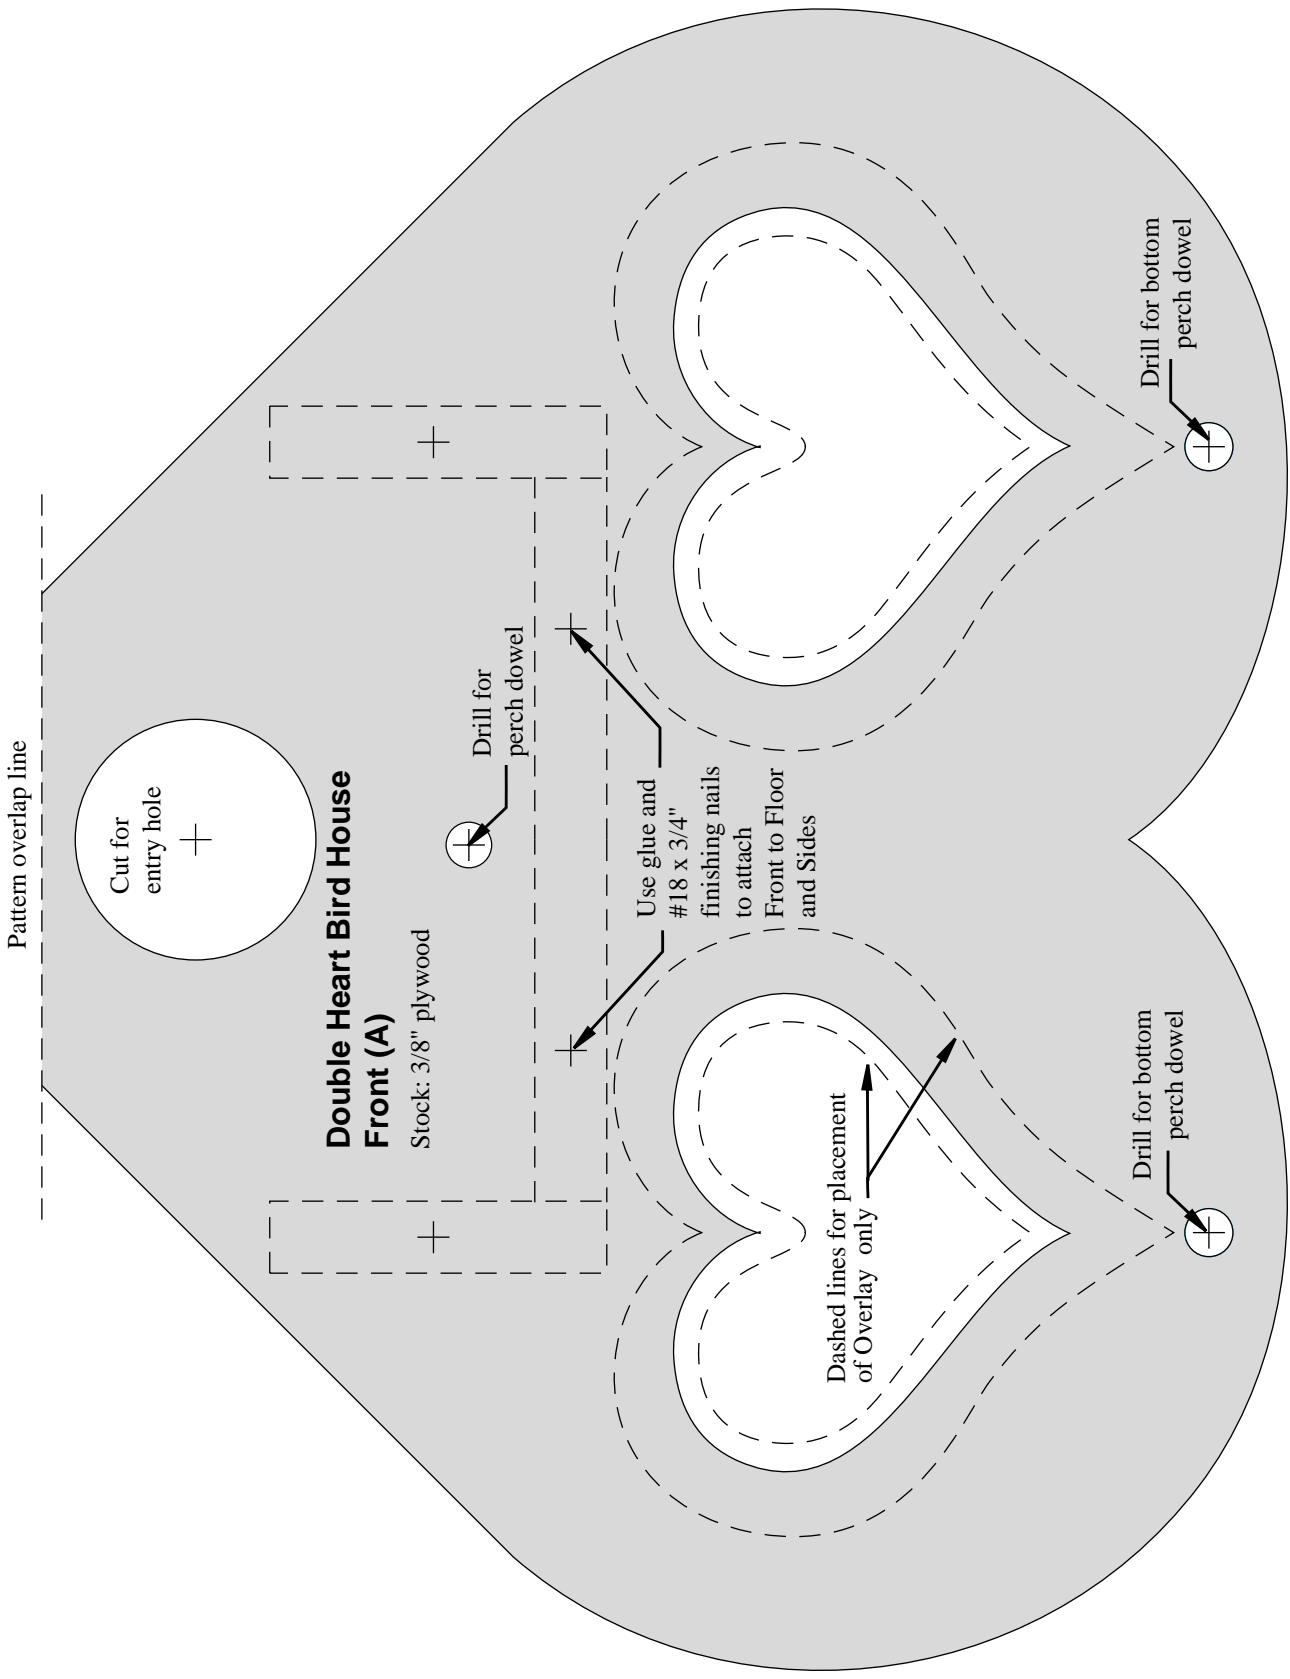

Pattern overlap line

Cut for entry hole

Double Heart Bird House Front (A)

Stock: 3/8" plywood


Drill for perch dowel

Use glue and #18 x 3/4" finishing nails to attach Front to Floor and Sides

Dashed lines for placement of Overlay only

Drill for bottom perch dowel

Drill for bottom perch dowel

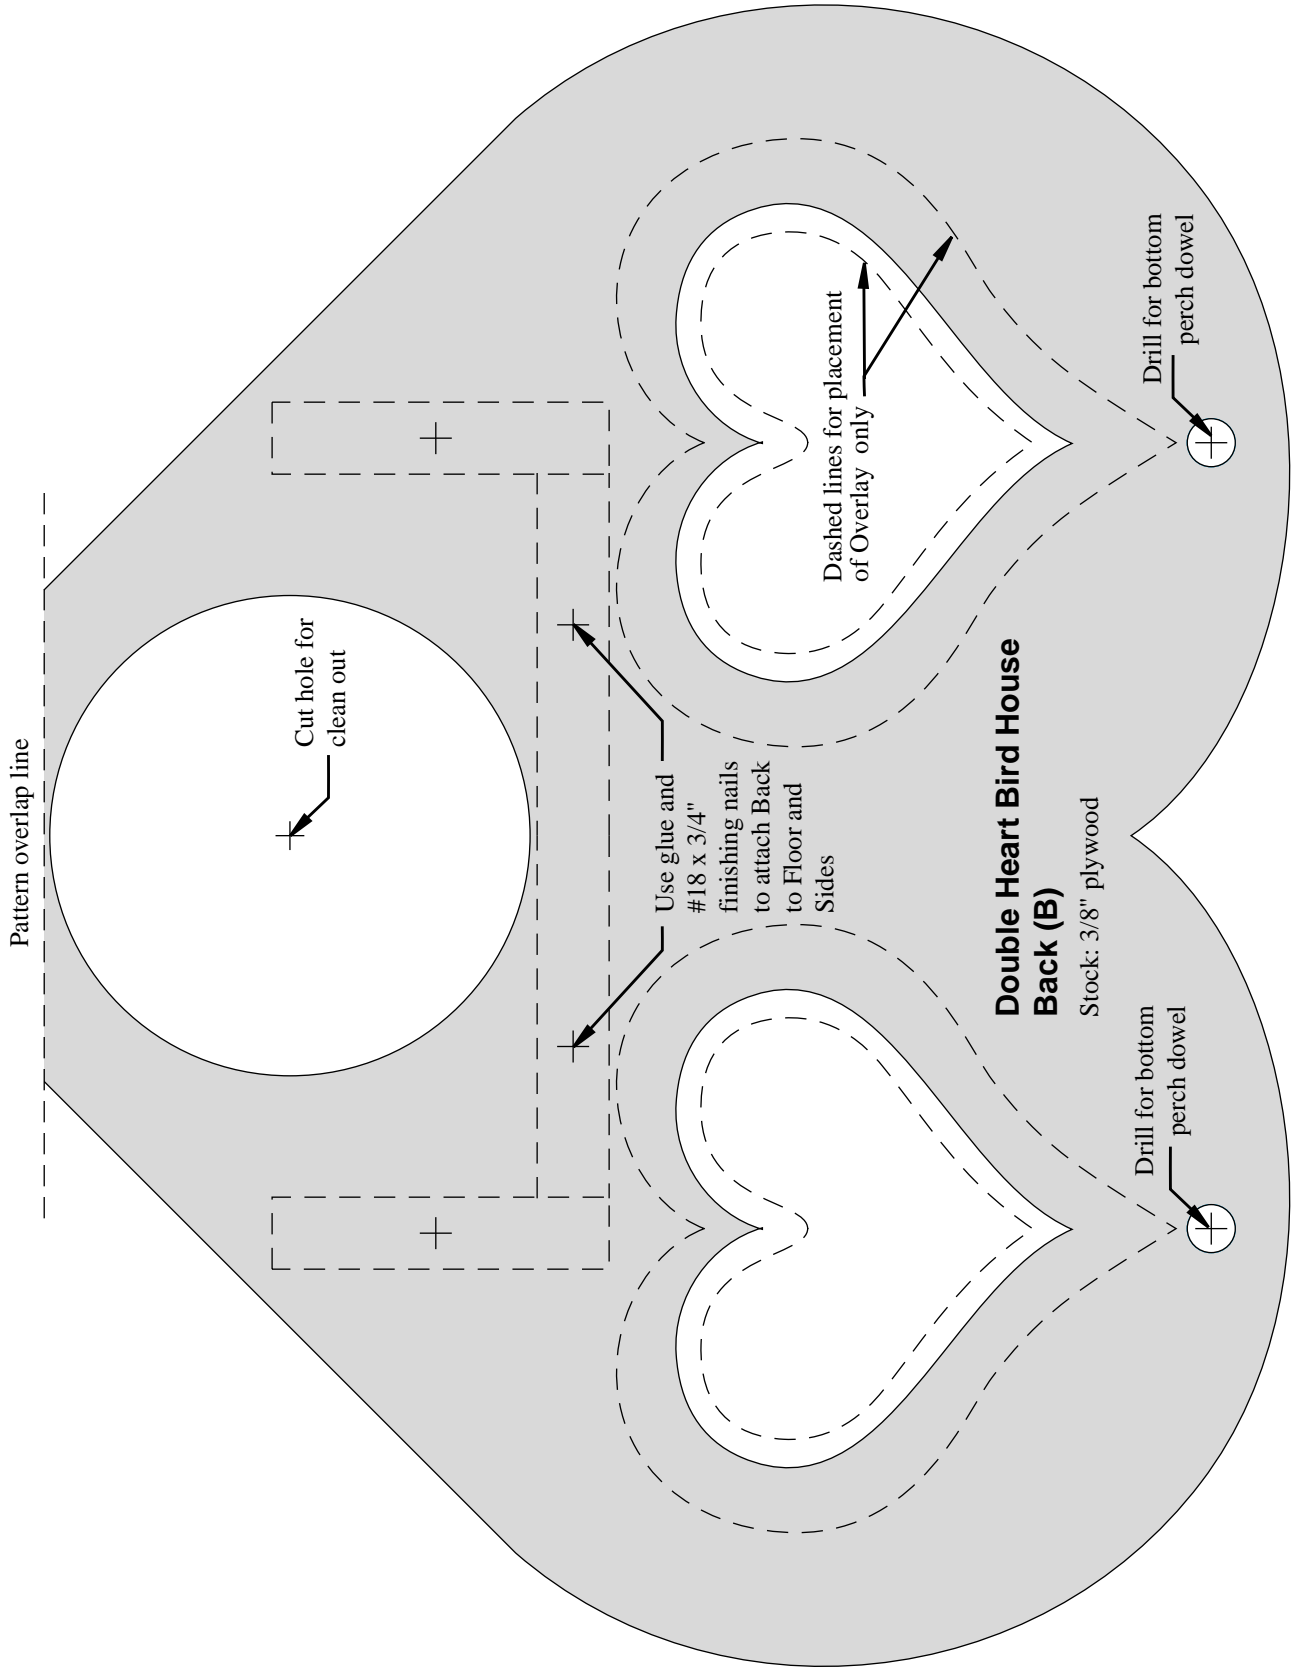

**Double Heart Bird House
Roof (C) / Roof (D)**

Stock: 3/8" plywood
Cut 1 each.



For Roof (C) cut on these lines

For Roof (D) cut on these lines

Use glue and #18 x 3/4"
finishing nails to attach Roof
halves to each other

**Double Heart Bird House
Floor (E)**

Stock: 3/8" plywood

**Double Heart Bird
House
Side (F)**

Stock: 3/8" plywood

